WD7752C8(A/C/D/F/G/H/R/S/T/V/W/Z)

Washing Machine
user manual

imagine the possibilities

Thank you for purchasing a Samsung product.
To receive a more complete service,
please register your product at
www.samsung.com/hk

SAMSUNG

features

- **Air Wash**
  The Air Wash system deodorizes unpleasant smells and sterilizes 'bacteria' and mites in the laundry that cannot be eliminated through a conventional washing system, a benefit of its unique airwashing mechanism.
  - Air-washable : Woolen coats, cotton/down jumpers, sweaters, suits, pillows, cushions, needlework dolls
  - Not applicable : leather, silk, velvet, electric blankets, other dirty laundry
- **Silver Wash**
  Samsung's silver Nano feature uses silver nano particles to sanitize and disinfect your laundry and your machine's drum. Delicates as well as smelly socks will get odor-free from human sweat at temperature as low as 30˚C. That saves energy and protects color and shape of your clothes.
- **Child Lock**
  The Child Lock function keeps curious little hands out of the washer. This safety feature ensures, that children do not toy with the operation of the washer. It also alerts you when it is activated.
- **Delay Start**
  This function enables uses to delay the washing machine's starting time for up to 19 hours.
- **DRY**
  Two types of drying mode, Intensive Dry and Gentle Dry, feed your different demand.
- **Delicates & Wool Program**
  Special care can be determined by the appropriate temperature, the gentle wash action and the appropriate amount of water.

safety information

Throughout this manual, you'll see Warning and Caution notes.
These warnings, cautions, and the important safety instructions that follow do not cover all possible conditions and situations that may occur.
It's your resposibility to use common sense, caution, and care when installing, maintaining, and operating your washer. Samsung is not liable for damages resulting from improper use.

IMPORTANT SAFETY SYMBOLS AND PRECAUTIONS

What the icons and signs in this user manual means:

WARNING	Hazards or unsafe practices that may result in **severe personal injury or death**.
CAUTION	Hazards or unsafe practices that may result in **minor personal injury or property damage**.
CAUTION	To reduce the risk of fire, explosion, electric shock, or personal injury when using your washer, follow these basic safety precautions:

BEFORE USING THE APPLIANCE

CAUTION Packing materials can be dangerous to children; keep all packing material (plastic bags, polystyrene, etc.) well out of the reach of children.

The appliance is designed for home use only.

Make sure that water and electrical connections are made by qualified technicians, observing the manufacturer's instructions (see "Installing the Washing Machine") and local safety regulations.

All packaging and shipping bolts must be removed before the appliance is used. Serious damage may occur if they are not removed. See "Removing the shipping bolts".

Before washing clothes for the first time, you must run a complete cycle without clothes. See "Washing for the first time".

Please install the washer in a dry and ventilated room. Please don't install it in a very wet place such as a balneary.

Check the machine before the first use, and never plug it in if there's obvious damage. Consult your local product service agent or Samsung dealer for any questions.

Please frequently clean the dirt in the debris filter. Refer to "CLEANING THE DEBRIS FILTER".

If this appliance is supplied from a cord extension set or electrical portable outlet device, the cord extension set or electrical portable outlet device must be positioned so that it is not subject to splashing or ingress of moisture.

safety information

SAFETY INSTRUCTIONS

WARNING Before cleaning or carrying out maintenance, unplug the appliance from the electrical outlet or set the ⏻ (Power) button to Off.

Make sure that the pockets of all clothing to be washed are empty.
Hard, sharp objects, such as coins, safety pins, nails, screws, or stones can cause extensive damage to the appliance.

Always unplug the appliance and turn off the water after use.

Before you open the door of the appliance, check that the water has drained. Do not open the door if you can still see water.

Pets and small children may climb into the appliance. Check the appliance before each use.

The glass door becomes very hot during the washing cycle. Keep children away from the appliance while it is in use.

Do not attempt to repair the appliance yourself. Repairs made by inexperienced or unqualified persons may cause injury and/or make more serious repairs to the appliance necessary.

If the plug (power supply cord) is damaged, it must be replaced by the manufacturer or its service agent or a similar qualified person in order to avoid a hazard.

This appliance should only be serviced by an authorized service center, and only genuine spare parts should be used.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

This appliance has to be connected to the plug endurable to proper power consumption.

This appliance has to be positioned so that the plug is accessible after installation.

Do not use processed water containing oil, cream or lotion, which is usually found in skin-care shops or massage clinics.

- Otherwise this will cause the packing to be deformed, which causes a malfunction or water leak.

Packing materials can be dangerous to children; keep all packing material (plastic bags, polystyrene, etc.) well out of the reach of children.

A stainless washing tube does not usually rust. However if some metal such as a hair pin is left in the tube for an extended time, the tube could rust.

- Do not leave water or bleach containing chlorine in the tube for an extended period of time.
- Do not regularly use or leave water containing iron in the tube for an extended period of time.
- If rust starts appearing on the surface of the tube, apply a cleansing agent (neutral) to the surface and use a sponge or soft cloth to clean it. (Under no circumstances use a metal brush)

For washing machines with ventilation openings in the base, that a carpet must not obstruct the openings.

Use the new hose-sets and old hose-sets should not be reused.

contents

INSTALLING THE WASHING MACHINE 6

6 Unpacking the Washing Machine
6 Overview of the washing machine
7 Selecting a location
7 Adjusting the leveling feet
7 Removing the shipping bolts
8 Connecting the water supply hose
9 Connecting the water supply hose (Option)
9 Positioning the drain hose

WASHING A LOAD OF LAUNDRY 10

10 Washing for the first time
10 Putting detergent in the washing machine
11 Overview of the control panel
13 Washing clothes using Fuzzy Logic
14 Washing clothes manually
14 Using delay start
14 Using silver wash options
15 Using Airwash options
16 Intensive Dry/ Gentle Dry
17 Washing tips and hints

MAINTAINING THE WASHING MACHINE 18

18 Draining the washing machine in an emergency
18 Repairing a frozen washing machine
18 Cleaning the exterior
19 Cleaning the detergent drawer and recess
19 Cleaning the debris filter
20 Cleaning the water hose mesh filter

TROUBLESHOOTING 21

21 Problems and solutions
21 Understanding error messages

PROGRAMME CHART 22

22 Programme chart

APPENDIX 24

24 Fabric care chart
24 Electrical warnings
24 Protecting the environment
25 Declaration of conformity
25 Specification

installing the washing machine

UNPACKING THE WASHING MACHINE

Unpack your washing machine and inspect it for shipping damage. Also make sure that you have received all of the items shown below. If the washing machine was damaged during shipping or you do not have all of the items, contact your Samsung dealer immediately.

OVERVIEW OF THE WASHING MACHINE

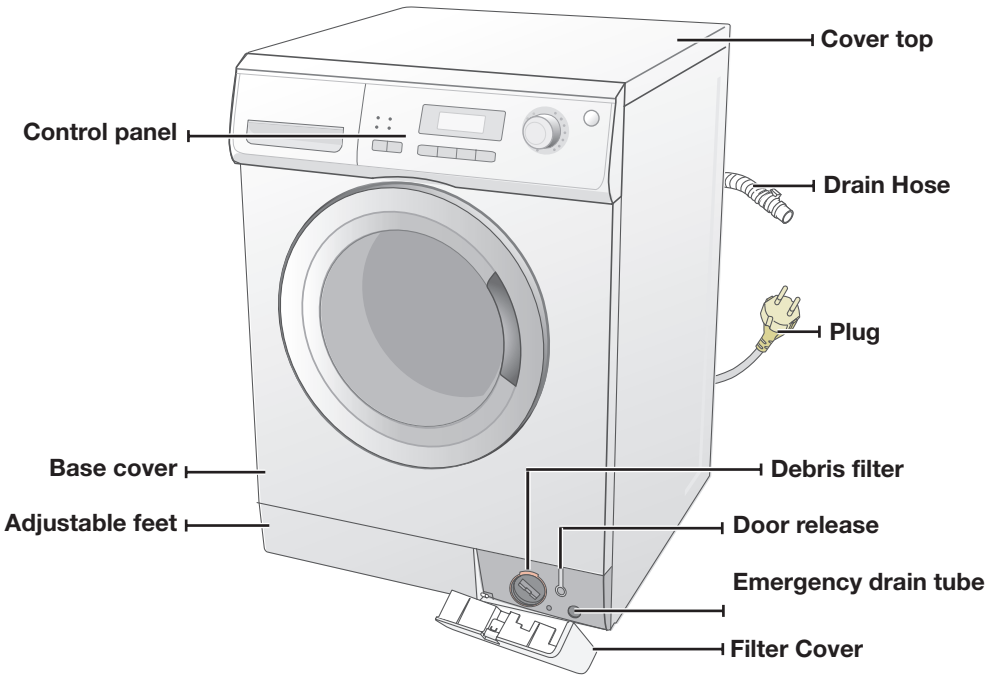

Wrench



Water supply hose

Hose guide



Bolt hole covers

SELECTING A LOCATION

Before you install the washing machine, select a location with the following characteristics:

- A hard, level surface (if the surface is uneven, see “Adjusting the leveling feet,” below)
- Away from direct sunlight.
- Adequate ventilation
- Room temperature that will not fall below 0 ˚C
- Away from sources of heat such as coal or gas

Make sure that the washing machine does not stand on its power cord.

Ventilation openings must not be obstructed by carpeting when the washing machine is installed on a carpeted floor.

ADJUSTING THE LEVELING FEET

If the floor is uneven, adjust the feet (do not insert pieces of wood or any other objects under the feet):

1. Loosen the leg bolt by turning it with your hand until it is at the desired height.
2. Tighten the locking nut by turning it with the wrench.

If the washer is placed on an uneven or weak surface, noise or vibration occurs. (Only a 1 degree angle is allowed.)

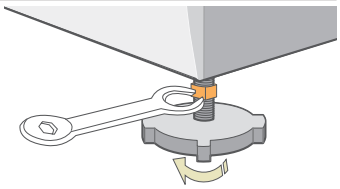

loose

REMOVING THE SHIPPING BOLTS

Before installing the washing machine, you must remove the five shipping bolts from the back of the unit.

1. Loosen all the bolts with the supplied wrench.

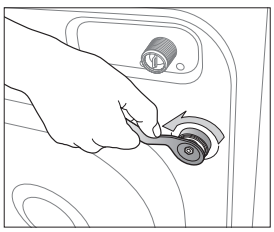

2. Hold the bolt with the spanner and pull it through the wide section of the hole. Repeat for each bolt.

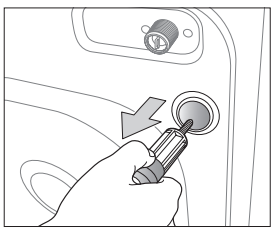

3. Fill the holes with the supplied plastic covers.

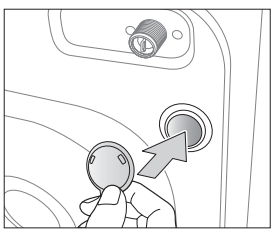

4. Store the shipping bolts away safely in case you have to move the washing machine in the future.

WARNING Packaging materials can be dangerous to children; keep all packaging material (plastic bags, polystyrene, etc.) well out of the reach of children.

installing the washing machine

CONNECTING THE WATER SUPPLY HOSE

The water supply hose must be connected to the washing machine at one end and to the water faucet at the other. Do not stretch the water supply hose. If the hose is too short, replace the hose with a longer, high pressure hose.

To connect the water supply hose:

1. Take the L-shaped arm fitting for the cold water supply hose and connect to the cold water supply intake on the back of the machine. Tighten by hand.
2. Connect the other end of the cold water supply hose to your sink's cold water faucet and tighten it by hand. If necessary, you can reposition the water supply hose at the washing machine end by loosening the fitting, rotating the hose, and retightening the fitting.

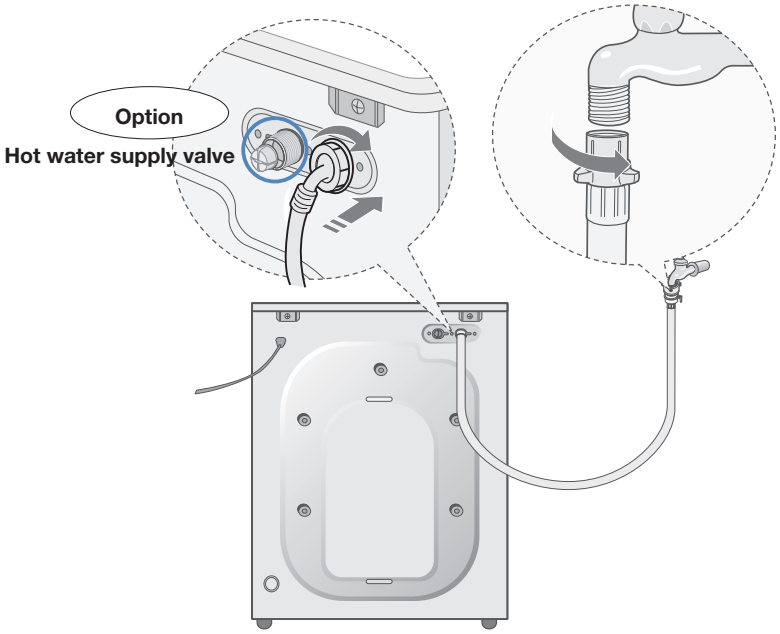

Option:

1. Take the red L-shaped arm fitting for the hot water supply hose and connect to the red hot water supply intake on the back of the machine. Tighten by hand.
2. Connect the other end of the hot water supply hose to your sink's hot water faucet and tighten it by hand.

CONNECTING THE WATER SUPPLY HOSE (OPTION)

1. Remove the adaptor from the water supply hose.

2. First, using a '+' type screw driver, loosen the four screws on the adaptor. Next, take the adaptor and turn part(b) following the arrow until there is a 5mm gap.

3. Connect the adaptor to the water tap by tightening the screws firmly.
Then, turn part (b) following the arrow and put(a) and (b) together.



4. Connect the water supply hose to the adaptor. Pull down part (c) of the water supply hose.
When you release part (c) the hose automatically connects to the adaptor making a 'click' sound.



5. Connect the other end of the water supply hose to the inlet water valve at the rear of the washer. Screw the hose clockwise all the way in.

After completing connection, if water leaks from the hose, then repeat the same steps. Use the most conventional type of faucet for water supply. In case the faucet is square or too big, remove the spacing ring before inserting the faucet into the adaptor.

POSITIONING THE DRAIN HOSE

The end of the drain hose may be positioned in three ways:

Over the edge of a sink

The drain hose must be placed at a height of between 60 and 90 cm. To keep the drain hose spout bent, use the supplied plastic hose guide. Secure the guide to the wall with a hook or to the faucet with a piece of string to prevent the drain hose from moving.

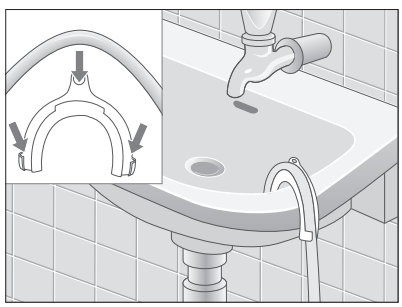

In a sink drain pipe branch

The drain pipe branch must be above the sink siphon so that the end of the hose is at least 60 cm above the ground.

In a drain pipe

Samsung recommends that you use a 65 cm high vertical pipe; it must be no shorter than 60 cm and no longer than 90 cm.

washing a load of laundry

WASHING FOR THE FIRST TIME

Before washing clothes for the first time, you must run a complete cycle without clothes.

To do this:

1. Press the ⏻ (Power) button.
2. Pour a little detergent into compartment (Ⅱ) in the detergent drawer.
3. Turn on the water supply to the washing machine.
4. Turn the Fuzzy Control dial to **Drum Clean**.
5. Press the Start/Pause button.

- This will remove any water from the manufacturer's test run remaining in the machine.

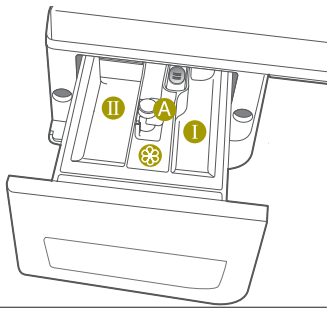

Dispenser Ⅰ: Detergent for prewash or starch.

Dispenser Ⅱ: Detergent for main wash, water softener, pre-soaking agent, bleach and stain removal product.

Dispenser ❀: Additives,e.g.fabric softener or former (fill no higher than lower edge of insert " A")

PUTTING DETERGENT IN THE WASHING MACHINE

1. Pull out the detergent drawer.
2. Add laundry detergent into compartment (Ⅱ).
3. Add softener into compartment (❀) (if you desire).
4. Add prewash detergent into compartment (Ⅰ) (if you desire).

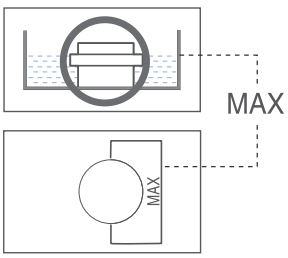

⚠ CAUTION

Concentrated or thick fabric softener and conditioner must be diluted with a little water before being poured into the dispenser (prevents the overflow from becoming blocked.

When using dry detergent it is recommended to pre dissolve the dry powder in some warm water before adding to the detergent dispenser or tub.

OVERVIEW OF THE CONTROL PANEL

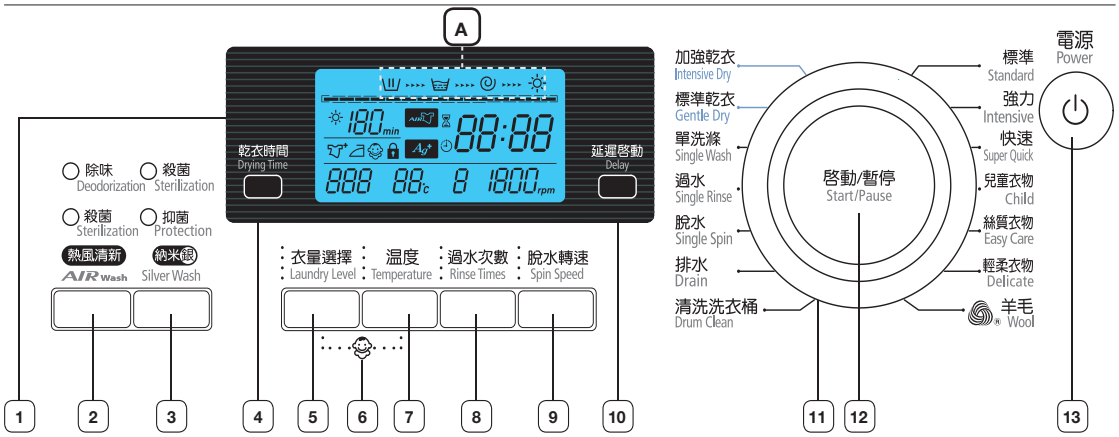

A part indicates the washing process: (Wash)- (Rinse)- (Spin)- (Dry)

1 **Digital graphic display**	Displays the remaining wash cycle time, all of washing information and error messages.
2 **Air Wash selection button**	Press the button repeatedly to cycle through the Deodorization and Sterilization functions. When the Air Wash function is selected, other cycles can no longer be used. **Deodorization** : Removes bad smells from the laundry **Sterilization** : Eliminates bacteria and mites from the laundry
3 **Silver Wash selection button**	Silver Nano water is supplied in washing as well as the last rinse, featuring sterilization and antibacterial coating. (You can select '**Sterilization**' or '**Protection**', '**Sterilization**' + '**Protection**'.)
4 **Drying Time selection button**	Drying course can last up to 120min. When selecting drying only, drying course will start after spinning . (The spinning time is about 15~17 min.) If you wish to go through from washing to drying, select the course you want by turning the course selection dial and then push the Drying Time button. For dry cycle, you can select the time only but you cannot select temperature and rotation speed. (120min. ,90min. ,60min. ,30min.)
5 **Laundry Level selection button**	You can enter the laundry amount and select the wash time accordingly. (Select L1 - L2 - L3 according to the amount of laundry)
6 **Child Lock selection button**	This is a button for preventing children from manipulating the washing machine. **On/Off** - To set the program on: Press the Start/Pause button to turn on the washing machine. Press and hold down the "**Laundry Level**"+"**Temperature**" button for 2-3 seconds. It can only be activated when the machine is turned on. Once you set the Child Lock function while in washing, no button is activated until you set it off. The Child Lock lamp lights on. To set the program off: Press and hold down the "**Laundry Level**"+"**Temperature**" button again for 2-3 seconds, then the lamp lights off and is set off. Check out the "**Child Lock**" button first when no button is activated while the washing machine is working. When the Child Lock function is activated, only the Power button works. The Child Lock function remains on even after the power is turned on and off or after the disconnecting and reconnecting the power cord.

washing a load of laundry

7 **Temperature selection button**	Press the button repeatedly to cycle through the available water temperature options. (cold(0˚C), 30˚C, 40˚C, 60˚C and 95˚C)
8 **Rinse Times selection button**	Press the rinse button to add rinse cycles. Maximum number of rinse cycles is five.
9 **Spin Speed selection button**	Press the button repeatedly to cycle through the available spin speed options. WD7752C8 | 0, 400, 800, 1200 rpm **0** : no spin **Non display** : Rinse hold
10 **Delay selection button**	Press the button repeatedly to cycle through the available delayed start options (from 3 hour to 19 hours in one hour increment). Displayed hours means the time of finished washing-cycle.
11 **Fuzzy Control dial**	Turn the dial to select one of the 14 available wash programs: Standard, Intensive, Super Quick, Child, Easy Care, Delicate, Wool, Drum Clean, Drain, Single Spin, Single Rinse, Single Wash, Gentle Dry, Intensive dry.
12 **Start/Pause selection button**	Press to pause and restart programs.
13 ⏻ **Power selection button**	Press once to turn the washing machine on, press again to turn the washing machine off. If the washing machine power is left on for longer than 10 minutes without any buttons being touched, the power automatically turns off.

WASHING CLOTHES USING FUZZY LOGIC

Your new washing machine makes washing clothes easy, using Samsung's "Fuzzy Logic" automatic control system. When you select a wash programme, the machine will set the correct temperature, washing time, and washing speed.

To wash clothes using the Fuzzy Logic programs:

1. Turn on your sink's water faucet.
2. Press the ⏻ **(Power)** button.
3. Open the door.
4. Load the articles one at a time loosely into the drum, without overfilling.
5. Close the door.
6. Add the detergent, softener, and prewash detergent (if necessary) into the appropriate compartment.

Wash is only available when washing.....

7. Turn the **Fuzzy Control dial** to select the appropriate program for the type of clothes Standard, Intensive, Super Quick, Child, Easy Care, Delicate, Wool, Drum Clean, Drain, Single Spin, Single Rinse, Single Wash, Gentle Dry, Intensive dry. You will see the indicators light up on the control panel.

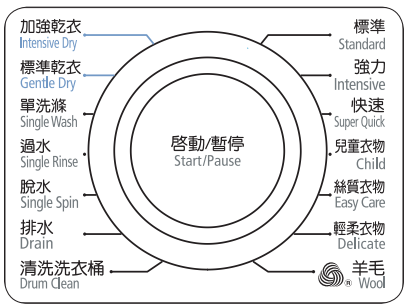

8. At this time, you can control the wash temperature, rinsing times, spin speed, delay time by pressing the appropriate option button.
9. Press the **Start/Pause** button on the Fuzzy Control dial and the wash cycle will begin. The process indicator will light up and the remaining time for the cycle will appear in the display.

When the cycle is finished:

After the total cycle has finished, the power will turn off automatically.

1. Open the door.
2. Remove laundry.

washing a load of laundry

WASHING CLOTHES MANUALLY

You can wash clothes manually without using the Fuzzy Logic feature.

To do so:

1. Turn the water supply on.
2. Press the ⏻ **(Power)** button on the washing machine.
3. Open the door.
4. Load the articles one at a time loosely into the drum, without overfilling.
5. Close the door.
6. Put the detergent and, if necessary, softener or prewash detergent, in the appropriate compartments.
7. Use the **Cycle Selector** to select the appropriate cycle.
8. Press the **Temperature** button to select the temperature. (cold(0˚C), 30˚C, 40˚C, 60˚C, 95˚C)
9. Press to **Rinse** button to select the required number of rinse cycles.
   Maximum number of rinse cycles is five.
   The washing duration will be prolonged accordingly.
10. Press the **Spin** button to select the spin speed. [0, 400, 800 or 1200 revolutions per minute(rpm)]
    0 : No spin , Non display : Rinse hold
11. Press the button repeatedly to cycle through the available delayed start options (from 3 hour to 19 hours in one hour increment). Displayed hours means the time of finished washing-cycle.
12. Press the **Start/Pause** button and the machine will begin the cycle.

USING DELAY START

You can set the washing machine to finish your wash automatically at a later time, choosing from 3 to 19 hour delay (in 1 hour increment). Displayed hours means the time of finished washing-cycle.

To do this:

1. Manually or automatically set your washing machine for the type of clothes you are washing.
2. Press the **Delay Start** button repeatedly until the delay time is set.
3. Press the **Start/Pause** button. The Delay Start indicator will light, and the clock will begin counting down until it reaches your finish time.
4. To cancel "**Delay Start**", press the ⏻ (Power) button, then turn the washing machine on again.

USING SILVER WASH OPTIONS

When this function is selected, silverions are generated in the water through ionization. These silverions can stop the growth, division and propagation of bacteria, so as to sanitize your clothes.

The Silver generator carries a warranty of 10 years for once run a week and if you use more often, please call for a Service Technician to replace it for a new one in time.

1. Turn the water supply on and press the ⏻ **(Power)** button.
2. Open the door, load the articles one at a time loosely into the drum, and then close the door.
3. Add the detergent and softener(if necessary) into the appropriate compartment.
4. Turn the dial to select the appropriate program.

- Silver Nano Function is available with program of Standard, Intensive, Super Quick, Child, Easy Care, Delicate, and Drum Clean.

5. Press the **Silver Wash** button and select function of **Sterilization** or **Protection**.

- You can only select **Sterilization** if you've chosen **Single Wash**.
- You can only select **Protection** if you've selected **rinse times**.

6. Select the laundry load level, wash temperature, rinsing times and spin speed as you wish.
7. Press the **Start/Pause** button and the wash cycle will begin.

USING AIRWASH OPTIONS

The air system deodorises and sanitises your clothes and reduces wrinkles on them with smooth air washing.

Conditions in which to use Airwash

1. A suit that's starting to get a bit smelly
2. A woolen jumper that's been sitting in the back of your closet since last winter and is now getting musty

Advantages of Air wash

1. Saves your water, energy, detergent and ironing time.
2. Effective in sanitizing the items that cannot be washed in common way. (pillows, cushions, teddybears, etc.)
   - Removes 99% of bacteria from these items to remove allergens.

Air wash cycle (Deodorisation,Sterilisation)

1. Open the door and insert your laundry. Then close the door.
2. Push the Power button.
3. Turn the course selection dial and select the Air wash course (Deodorisation, Sterilisation).
   - When the Airwash course is selected, you cannot select other functions additionally.
4. Close the door and push the Start/Pause button.
   - Water is supplied and drained continually during each cycle.
   When each cycle finishes, the drum rotates for about 30 minutes to tumble the laundry. You can stop your washing machine and take out your laundry at any time during the tumbling.

Available laundry

- Wool coat, jumpers with cotton and goose feathers, sweaters, suits, and bedding (two items or less)

Clothes for which you should not perform deodorisation

- Leathers, minks, furs, natural silks, velvets, etc that can be damaged by the deodorisation process
- For underwear with much laces, dolls using glues, cushions and suits, glues may become apart due to heat.
- Be careful of clothes with studs because they may be broken.
- For starched clothes, they may become less stiff and have a deformation.
- Dirty outer garments may be damaged because dirties may become stiff.

Clothes for which you should not perform sterilisation

- Hard bedding such as a wooden pillow
- Pillows and bedclothes filled with grains or plastics instead cotton
- Electric blankets
- Wool bedclothes that unhair much and generate a lot of dust

You must not use the air wash course for beddings filled with sponges or styrofoam.
A fire may outbreak on the sponges or styrofoam and cause damage to the product.

washing a load of laundry

INTENSIVE DRY/ GENTLE DRY

When you need to dry your clothes, you can choose program of **Intensive Dry** or **Gentle Dry**.

To do this:

1. Press the ⏻ **(Power)** button.
2. Open the door, load the articles to dry, and close the door.
3. Turn the dial to select **Intensive Dry** or **Gentle Dry**.

- The default drying time of **Intensive Dry** is 120 min.. You can press **Drying Time** button repeatedly to cycle through 120min., 90min., 60min. and 30min..
- The default drying time of **Gentle Dry** is 60 min.. You can press **Drying Time** button repeatedly to cycle through 60min. and 30min..

4. Press the **Start/Pause** button to start the program.

- If the laundry contains too much water after spinning, the machine will automatically run a drying program.

A WASH-TO-DRY CYCLE

If you wish to run a whole cycle from wash to dry, you can do as follows:

1. Turn the water supply on and press the ⏻ **(Power)** button.
2. Open the door, load the articles one at a time loosely into the drum, and then close the door.
3. According to the weight of the laundry, add the detergent, softener and prewash detergent (if necessary) into the appropriate compartment.
4. Turn the dial to select the appropriate program.

You cannot choose drying program with **Delicate**, **Wool**, **Drain** and **Drum Clean**.

5. Press the **Drying Time** button.

- You can press it repeatedly to cycle through 120min., 90min., 60min. and 30min. to select an appropriate one.
- The default spin speed is the maximum speed.
- The **Delay Wash** function is optional.

6. Press the **Start/Pause** button to start the wash-to-dry cycle.

If you choose washing and drying program at the same time, 5min. will be added to the last spin for a better drying effect.

DRYING TIPS AND HINTS

1. If you choose washing and drying program at the same time, 5 minutes will be added to the last spin cycle for a better drying effect.
2. To avoid wrinkles caused by a large laundry drying, you can set short drying time and add drying times (if necessary).
3. Before the drying cycle starts, if there is water in the drum, the washer will automatically do a spinning first at the maximum spin speed.
4. Make sure the water faucet is on during the drying cycle, or the drying cannot progress.
5. The selection of drying function is based on the type of your clothes, otherwise, the drying may cause clothes to shrink, to be deformed or fade.
6. Clothes with gasoline, kerosene, alcohol and other impregnant shouldn't be put into the washer to take a washing cycle, a spinning cycle, or a drying cycle especially. Otherwise, there may be a risk of fire or explosion.

If the drum temperature is very high at the end of the drying cycle, the washer will start a cooling cycle lasting 10min. at the most. The digital graphic display shows "COOL" during the cooling, and indicates "END" when finished.

WASHING TIPS AND HINTS

Sorting your laundry: Sort your laundry according to the following characteristics:

- **Type of fabric care label symbol:** Sort laundry into cottons, mixed fibres, synthetics, silks, wools and rayon.
- **Colour:** Divide whites and colours. Wash new, coloured items separately.
- **Size:** Placing items of different sizes in the same load will improve the washing action.
- **Sensitivity:** Wash delicate items separately, using the Delicate wash programme for pure new wool, curtains and silk articles. Check the labels on the items you are washing or refer to the fabric care chart in the appendix.

Emptying pockets: Coins, safety pins and similar items can damage linen, the washing machine drum, and the water tank.

Securing fasteners: Close zippers and fasten buttons or hooks; loose belts or ribbons should be tied together.

Prewashing cotton: Your new washing machine, combined with modern detergents, will give perfect washing results, thus saving energy, time, water and detergent. However, if your cotton is particularly dirty, use a prewash with a protein-based detergent.

Determining load capacity: Do not overload the washing machine or your laundry may not wash properly. Use the chart below to determine the load capacity for the type of laundry you are washing.

Fabric Type	Load Capacity
	WD7752C8
Standard	7.5 kg
Quick	3.0 kg
Delicate	2.5 kg
Wool	2.0 kg

Detergent tips: The type of detergent you should use is based on the type of fabric (cotton, synthetic, delicate items, wool), colour, wash temperature, degree and type of soiling.

Always use “low suds” laundry soap, which is designed for automatic washing machines.

Follow the detergent manufacturer’s recommendations based upon the weight of the laundry, the degree of soiling, and the hardness of the water in your area. If you do not know how hard your water is, ask your water authority.

Keep detergents and additives in a safe, dry place out of the reach of children.

maintaining the washing machine

DRAINING THE WASHING MACHINE IN AN EMERGENCY

1. Unplug the washing machine from the power supply.
2. Open the filter-cover by using a coin or a key.

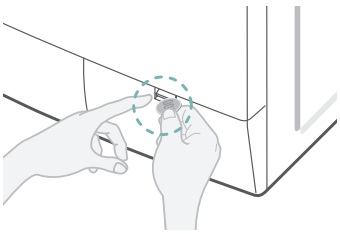

3. Unscrew the emergency drain cap by turning left. Grip the cap on the end of the emergency drain tube and slowly pull it out about 15 cm.
4. Allow all the water to flow into a bowl.
5. Reinsert the drain tube and screw the cap back on.
6. Replace the filter-cover.

REPAIRING A FROZEN WASHING MACHINE

If the temperature drops below freezing and your washing machine is frozen:

1. Unplug the washing machine.
2. Pour warm water on the source faucet to loosen the water supply hose.
3. Remove the water supply hose and soak it in warm water.
4. Pour warm water into the washing machine drum and let it sit for 10 minutes.
5. Reconnect the water supply hose to the water faucet and check if the water supply and drain operations are normally.

CLEANING THE EXTERIOR

1. Wipe the washing machine surfaces, including the control panel, with a soft cloth and nonabrasive household detergents.
2. Use a soft cloth to dry the surfaces.
3. Do not pour water on the washing machine.

maintaining the washing machine

CLEANING THE DETERGENT DRAWER AND RECESS

1. Press the release lever on the inside of the detergent drawer and pull it out.
2. Remove the cap from compartment (❋).
3. Wash all of the parts under running water.
4. Clean the drawer recess with an old toothbrush.
5. Reinsert the cap (Pushing it firmly into place) and replace the liquid detergent divider into the drawer.
6. Push the drawer back into place.
7. Run a rinse programme without any laundry in the drum.

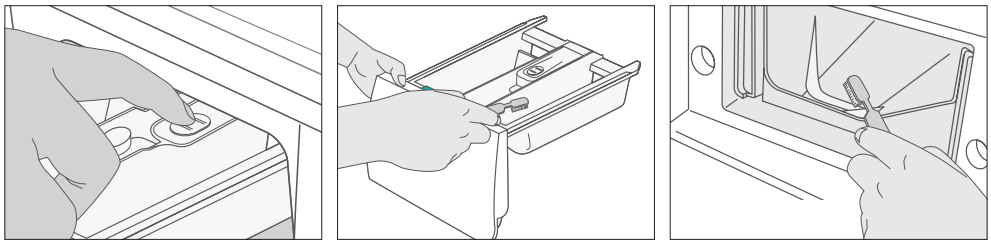

CLEANING THE DEBRIS FILTER

Clean the debris filter 5 or 6 times a year, or when you see the following error message on the display:

1. Open the filter-cover.
2. Unscrew emergency drain cap by turning left and drain off all the water.
3. Unscrew the filter cap and take it out.

4. Wash any dirt or other material from the filter. Make sure the drain pump propeller behind the filter is not blocked. Replace the filter cap.
5. Replace the filter-cover.

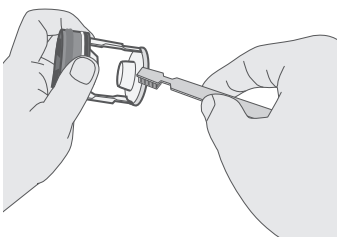

maintaining the washing machine

CLEANING THE WATER HOSE MESH FILTER

You should clean the water hose mesh filter at least one time per year, or when you see the following error message on the display:

To do this:

1. Turn off the water source to the washing machine.
2. Unscrew the hose from the back of the washing machine.
3. With a pair of pliers, gently pull out the mesh filter from the end of the hose and rinse it under water until clean. Also clean the inside and outside of the threaded connector.
4. Push the filter back into place.
5. Screw the hose back onto the washing machine.
6. Turn on the faucet and make sure the connections are watertight.

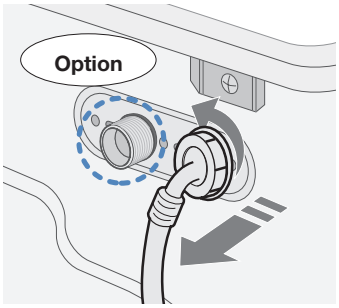

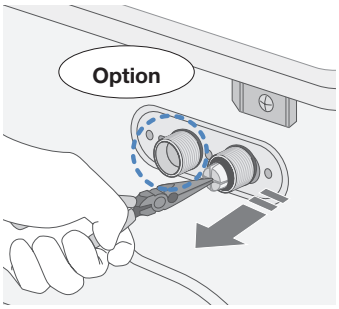

troubleshooting

PROBLEMS AND SOLUTIONS

PROBLEM	SOLUTION
The washing machine will not start	• Make sure the door is firmly closed. • Make sure the washing machine is plugged in. • Make sure the water source faucet is turned on. • Make sure to press the Start/Pause button.
No water or insufficient water supply	• Make sure the water source faucet is turned on. • Make sure the water source hose is not frozen. • Make sure the water intake hose is not bent. • Make sure the filter on the water intake hose is not clogged.
Detergent remains in the detergent drawer after the wash program is complete	• Make sure the washing machine is running with sufficient water pressure. • Put the detergents in the inner parts of the detergent drawer(away from the outside edges).
Washing machine vibrates or is too noisy	• Make sure the washing machine is set on a level surface. If the surface is not level, adjust the washing machine feet to level the appliance. • Make sure that the shipping bolts are removed. • Make sure the washing machine is not touching any other object. • Make sure the laundry load is balanced.
The washing machine does not drain and/or spin	• Make sure the drain hose is not squashed or bent. • Make sure the water hose mesh filter is not clogged.
The Door does not open	• Disconnect the power plug from the power supply. • Remove the water from the washing machine. • Open the filter cover using a coin. Locate the orange plastic tab and pull forward to open the door. • Check out whether the Child Lock function is not on. 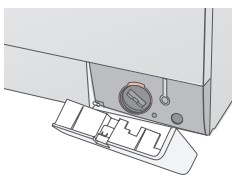

UNDERSTANDING ERROR MESSAGES

ERROR CODE	SOLUTION
dE2	• Close the door.
4E	• Make sure the source water faucet is turned on. • Check the water pressure.
5E	• Clean the debris filter. • Make sure the drainage hose is installed correctly.
UE	• Laundry load is unbalanced; loosen any tangled laundry. If only one item of clothing needs washing, such as a bathrobe or jeans, the final spin result might be unsatisfactory and an “UE” error message will be shown in the display window.
LE	• Check whether the bottom of the drain hose is too low.(Check if there’s something wrong with the hose guide.) • Check whether the bottom of the drain hose is soaking in the water.

Before contacting After-Sales service:

1. Try to remedy the problem (See “Troubleshooting” on this page).
2. Restart the programme to see if the fault is repeated.
3. If the malfunction persists, call after-sales service and describe the problem.

programme chart

PROGRAMME CHART

(● user option)

Programme	Max load (kg)	Detergent and Additives		Temp (℃)	Spin Speed(Max) rpm	Delay start	Silver Wash	Dry
	WD7752C8	Wash	Softener		WD7752C8			
Standard	7.5	yes	●	95	1200	●	yes	●
Super Quick	3.0	yes	●	30	1200	●	yes	●
Child	7.5	yes	●	95	1200	●	yes	●
Delicate	2.5	yes	●	30	800	●	yes	-
Wool	2.0	yes	●	40	800	●	-	-
Drum Clean	-	yes	-	60	1200	●	yes	-

Program	Type of wash
Standard	Averagely or lightly soiled cottons, bed linen, table linen, underwear, towels, shirts, etc.
Super Quick	Lightly soiled cottons or linen blouses, shirts, dark coloured terry cloth, colored linen articles, jeans, etc.
Child	Averagely or lightly soiled baby(children) cottons, bed linen, table linen, underwear, towels, shirts, etc.
Delicate	Delicate curtains, dresses, skirts, shirts and blouses.
Wool	Only machine washable woolens with pure new wool label.(Very light wash course like hand wash.)
Drum Clean	Used to clean the drum. Don't put laundry into the machine.

1. Programme with prewash lasts approx.15 minutes longer.
2. The programme duration data has been measured under the conditions specified in Standard IEC 60456 / EN 60456.
3. Consumption in individual homes may differ from the values given in the table due to variations in the pressure and temperature of the water supply, the load and the type of laundry.

programme chart

(● user option)

Programme	Max load (kg)	Detergent and Additives		Temp (℃)	Spin Speed(Max) rpm	Delay start	Silver Wash	Dry
	WD7752C8	Wash	Softener		WD7752C8			
Intensive	7.5	yes	●	95	1200	●	●	●
Single Wash	2.5	yes	-	40	1200	●	●	●
Single Rinse	-	-	●	-	1200	●	●	●
Single Spin	-	-	-	-	1200	●	-	●

Program	Type of wash
Intensive	Stained or heavily soiled cottons, bed linen, table linen, underwear, towels, shirts, jeans, etc.
Single Wash	Wash without rinsing and spinning.
Single Rinse	Rinse and spin the laundry without washing.
Single Spin	Only spin.

appendix

FABRIC CARE CHART

	Resistant material		Can be ironed at 100˚C max
	Delicate fabric		Do not iron
	Item can be washed at 95˚C max		Can be dry cleaned using any solvent
	Item can be washed at 60˚C max		Dry clean with perchloride, lighter fuel, pure alcohol or R113 only
	Item can be washed at 40°C max		Dry clean with aviation fuel, pure alcohol or R113 only
	Item can be washed at 30°C max		Do not dry clean
	Item may be hand washed		Dry flat
	Dry clean only		Can be hung to dry
	Can be bleached in cold water		Dry on clothes hanger
	Do not bleach		Tumble dry, normal heat
	Can be ironed at 200˚C max		Tumble dry, reduced heat
	Can be ironed at 150˚C max		Do not tumble dry

ELECTRICAL WARNINGS

To reduce the risk of fire, electrical shock, and other injuries, keep these safety precautions in mind:

- Operate the appliance only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied to your home, consult your appliance dealer or local power company.
- Use only a grounded or polarized outlet. This plug will fit into the power outlet only one way. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug still doesn't fit, contact your electrician to replace your outlet.
- Protect the power cord. Power supply cords should be routed so that they are unlikely to be walked on or pinched by items placed on or against them. Pay particular attention to cords at plugs, convenience receptacles, and the point where they exit from the unit.
- Do not overload the wall outlet or extension cords. Overloading can result in fire or electric shock.

PROTECTING THE ENVIRONMENT

- This appliance is manufactured from recyclable materials. If you decide to dispose of this appliance, please observe local waste disposal regulations. Cut off the power cord so that the appliance cannot be connected to a power source. Remove the door so that animals and small children cannot get trapped inside the appliance.
- Do not exceed the detergent quantities recommended in the detergent manu-facturers' instructions.
- Use stain removal products and bleaches before the wash cycle only when strictly necessary.
- Save water and electricity by only washing full loads (the exact amount depends upon the program used).

appendix

DECLARATION OF CONFORMITY

This appliance complies with European safety standards, EC directive 93/68 and EN Standard 60335.

SPECIFICATION

TYPE		FRONT LOADING WASHER	
DIMENSION		WD7752C8	
		W598mm X D634mm X H840mm	
WATER PRESSURE		50 kPa ~ 800 kPa	
WATER VOLUME		90 ℓ	
WEIGHT	NET	80 kg	
WASH AND DRY CAPACITY	MODEL	WD7752C8	
	WASH	7.5 kg (DRY LAUNDRY)	
	DRY	3.5 kg (DRY LAUNDRY)	
POWER CONSUMPTION	MODEL	WD7752C8	
	WASHING	230 V	150 W
	WASHING AND HEATING	220 V	2000 W
		240 V	2400 W
	DRY	220 V	2000 W
		240 V	2400 W
	PUMPING	34 W	
SPIN REVOLUTION	MODEL	WD7752C8	
	RPM	1200	
WATERNOISE	SOUND PRESSURE LEVEL	41 dB (A)	
	SOUND POWER LEVEL	53 dB (A)	
SPINNOISE	SOUND PRESSURE LEVEL	50 dB (A)	
	SOUND POWER LEVEL	62 dB (A)	

QUESTIONS OR COMMENTS?

Country	CALL	OR VISIT US ONLINE AT
HONG KONG	3698-4698	www.samsung.com/hk

Code No. DC68-02413K_EN

WD7752C8(A/C/D/F/G/H/R/S/T/V/W/Z)

三星滾桶洗衣機
使用說明書

無窮想像, **無限可能**

感謝您購買三星產品。
為了您能夠獲得更完善的客服,
請在以下網站註冊您購買的產品
www.samsung.com/hk

SAMSUNG

功能特點

- **熱風清新(除味/殺菌)**

  神奇的熱風清新功能, 不用水洗, 就可以輕鬆去除衣物上的多種異味, 還能起到殺菌作用。
  - 除味:利用鼓入空氣形成強勁的高溫氣流, 穿透衣物吸收和分解氣味粒子, 最後凝結成水排出洗衣機外。
  - 殺菌:利用高溫殺滅螨蟲等有害微生物。

- **納米銀(殺菌/抑菌)**

  Samsung 的銀納米功能利用銀納米微粒對衣物和洗衣桶進行清潔和消毒。從輕柔衣物到散發汗臭的襪子, 均可在低至 30℃ 的溫度下徹底去除汗味。在節能的同時保證衣物不褪色、不變形。

- **兒童安全鎖**

  「兒童安全鎖」功能使好奇的小手遠離洗衣機。此安全功能可確保兒童無法將洗衣機的操作按鈕當玩具玩耍。在它啓動時同樣會提醒您。

- **延遲啓動**

  該功能可以延遲洗滌程序啓動的時間。您可以從3到19個小時之間以每一小時的增量來選擇延遲啓動時間。

- **幹衣**

  可為您提供兩種不同需求的幹衣程序(加強幹衣、標準幹衣)。

- **輕柔和羊毛程序**

  合適的水溫, 輕柔的洗滌動作以及合適的水量為精細質地的衣物提供專門的保護。

安全注意事項

通過說明書, 您會看到"警告"或"注意"的注釋。

這些警告、注意事項以及隨後提示的重要安全說明並沒有包括所有可能發生的狀況。

所以在安裝、保養和使用洗衣機時, 請仔細閱讀這些說明內容並謹慎操作, 以便能夠充分利用洗衣機的功能, 延長本機的使用壽命。對於因使用不當而造成的損失, 三星公司不承擔責任。

重要安全標誌和注意事項

本使用說明書中圖示及符號的含義:

⚠ 警告	不安全的操作可能會導致嚴重人身傷亡。
⚠ 注意	不安全的操作可能會導致輕微人身傷害、財產損失。
⚠ 注意	為了減少因使用洗衣機而發生的火災、爆炸或人身傷害, 請遵守以下基本安全注意事項。

在使用洗衣機之前請閱讀以下內容

⚠ 注意 包裝材料可能對兒童有危險, 請把所有包裝材料(塑膠袋、泡沫塑料等)置於兒童不能觸及的地方。

本洗衣機僅為家庭使用設計。

務必由合格的技術人員依據製造商的指示(參見"安裝洗衣機")和當地的安全規範進行水管和電源的連接。

在使用本洗衣機前, 應拆除所有的包裝和裝運螺栓。否則, 洗衣機運行後可能產生過大的振動和噪音, 嚴重損壞洗衣機。參見"拆除裝運螺栓"。

第一次洗滌之前, 必須在沒有裝入衣物的情況下完成一次全過程洗滌。參見"首次洗滌"。

洗衣機請安裝在乾燥、通風的室內。洗衣機不適宜安裝在浴室或非常潮濕的房間內。

第一次使用前, 如果洗衣機有明顯的損壞, 請勿通電。如有疑問, 請立即與當地的產品服務代理商或經銷商聯繫。

請經常清洗排水泵篩檢程序中的殘留物, 參見"清洗排水泵篩檢程序"。

如果您的機器是由電源線延長裝置或可攜式插線板供電的, 請注意將這些設備安放在合適的位置, 避免潮氣進入。

安全注意事項

安全注意事項

⚠ 警告 在清洗或維修洗衣機之前, 請拔下電源插頭或將⏻ (電源)按鈕切換至"關閉"狀態。

務必在洗衣前將所有衣物的口袋掏空。堅硬鋒利的物品, 例如硬幣、安全別針、釘子、螺絲或石子, 都可能會嚴重損壞洗衣機。

洗衣結束後, 切記拔掉洗衣機的電源插頭並關閉進水管水龍頭。

打開洗衣機門之前, 檢查是否已將存水排完。如果仍然有水, 請勿打開洗衣機門。

寵物和小孩可能會爬進洗衣機。因此有必要在每次使用前檢查洗衣機。

洗滌程序運行時, 玻璃門可能會變得很燙。因此在洗衣機運行時期間, 切勿讓小孩靠近。

切勿嘗試自行維修洗衣機, 或讓無經驗、不合格的人員進行維修。可能會嚴重損壞洗衣機並造成人身傷害。

如果電源線及插頭損壞, 應由製造商、產品服務代理商或類似的合格人員進行更換, 以免造成危險。

洗衣機僅由授權的服務中心進行維修, 且僅應使用原廠配件。

本洗衣機不適合兒童或體弱者使用, 除非有監護人進行適當監護, 以確保洗衣機的使用安全。應對兒童進行監督, 確保不會在洗衣機上玩耍。

電源插頭的規格應滿足用電負荷要求。請單獨使用220V的交流電源並可靠接地。

洗衣機應放置在靠近電源插座、水龍頭和有地漏(排水道)的房間內。

請勿使用經乳液、護膚液等含油漬處理過的水。這種水常見於護膚品店或按摩診所。

- 否則, 會引起密封件變形, 造成功能異常或漏水。

包裝材料可能對兒童有害;請將包裝材料(膠袋、聚苯乙烯等)置於兒童無法觸及的地方。

不銹鋼內桶通常不會生銹。然而, 如果髮夾等某些金屬物品在桶內置留時間過長, 洗衣內桶可能會生銹。

- 請勿讓水或含氯漂白劑在洗衣桶內置留時間過長。
- 請勿經常使用含鐵的水或長時間讓其留在洗衣槽內。
- 如果洗衣機內桶表面開始生銹, 請在表面滴上清潔劑(中性), 然後用海棉或軟布將鏽跡擦拭乾淨。(請勿使用金屬刷)

如果洗衣機底板上留有通風孔, 不得讓地毯等阻塞通風孔。

請使用新水管, 而不應再用舊水管。

目錄

安裝洗衣機 6

6 拆除洗衣機包裝
6 洗衣機各部件說明
6 附件
7 安裝環境
7 調整平衡支腳
7 拆除運輸螺釘
8 連接進水管
9 連接進水管（可選）
9 放置排水管

洗滌衣物 10

10 首次洗滌
10 洗滌劑如何放入
11 控制面板概觀
13 使用 FUZZY LOGIC 洗衣
14 手動洗衣
14 使用延遲啓動
15 熱風清新功能(除味/殺菌)
16 納米銀功能(殺菌/抑菌)
16 加強幹衣程序/標準幹衣程序
17 烘乾時注意事項及參考
17 洗衣常識及竅門

洗衣機的保養 18

18 緊急排水
18 處理已凍結的洗衣機
18 清潔外殼
19 清洗洗滌劑盒及凹進處
19 清洗碎屑過濾網
20 清洗進水管過濾網

故障排除 21

21 常見問題和解決方法
21 瞭解錯誤訊息

程序表 22

22 程序表

附錄 24

24 衣物保養符號說明
24 用電警告
24 環保資訊
25 產品執行標準
25 技術參數

安裝洗衣機

拆除洗衣機包裝

將洗衣機的包裝打開, 並檢查洗衣機裝運時是否損壞。同時檢查下圖中的所有配件是否齊全。如果洗衣機在裝運過程中損壞或配件不全, 請立即與三星經銷商聯繫。

洗衣機各部件說明

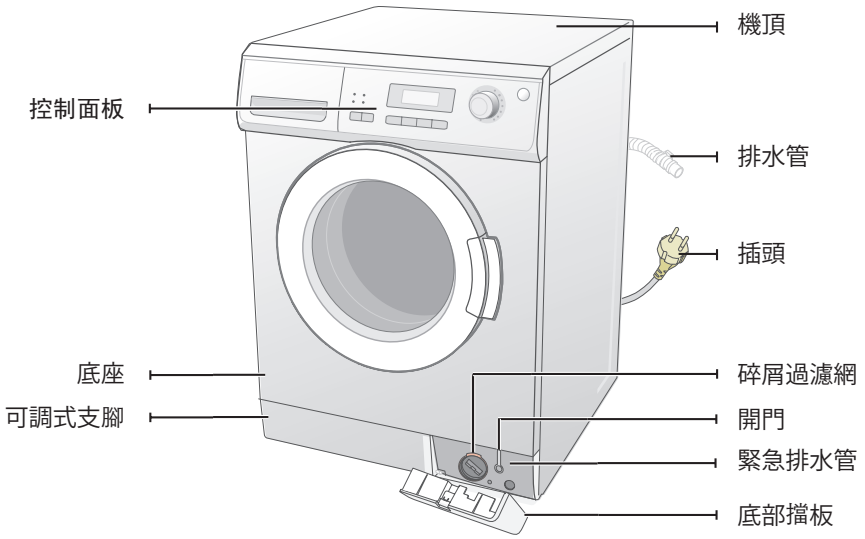

附件

安裝環境

安裝洗衣機之前, 首先要選擇一個符合以下條件的位置:

- 堅硬平坦的水平地面(如果地面不平, 参見如下"調整水平底腳"內容)
- 避免日光直射, 並通風良好。
- 室溫不低於0℃。
- 遠離如碳火或煤氣爐灶等熱源。

確保電源線未壓在洗衣機下麵。如果將洗衣機安裝在鋪有地毯的地面上, 小心不要讓地毯擋住通風口。

調整平衡支腳

若地面不平坦, 請調整支腳 (切勿在支腳下墊木塊或其他任何物件):

1. 用手旋轉腳座螺釘, 直至達到所需高度。

2. 用扳手擰緊螺母。

若洗衣機放置在表面不平坦或不牢固的地方, 會發出噪音或產生振動。(僅允許 1 度的傾斜。)

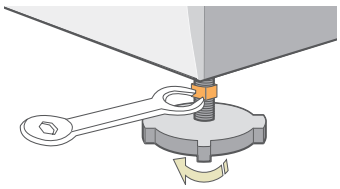

拆除運輸螺釘

使用洗衣機前, 必須拆除位於機背的所有運輸螺釘。

1. 拆除前, 使用扳手擰鬆所有螺釘。

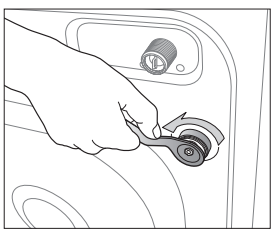

2. 捏著螺釘頭部並從孔的寬大部位將其拉出。重複以上動作將螺釘逐一拆除。

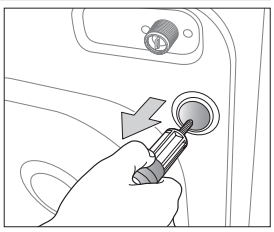

3. 用提供的塑膠蓋填塞每個小孔。

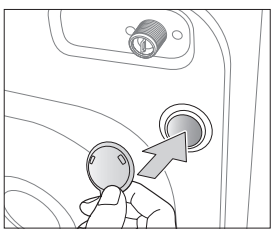

4. 存妥螺釘, 以供日後使用。

⚠ 警告 包裝材料可能對兒童有危險, 請把所有包裝材料(塑膠袋、泡沫塑料、裝運螺栓等)置於兒童不能觸及的地方。

安裝洗衣機

連接進水管

進水管的兩端, 必須分別連接洗衣機及水龍頭。切勿拉扯進水管。若該水管太短, 請使用更長的高壓水管更換該水管。

欲連接進水管, 請:

1. 將冷水進水管的 L 型裝配臂連接至機背的冷水進水口。然後用手擰緊。
2. 將冷水進水管的另一端連接至水槽的冷水水龍頭, 並用手擰緊。若有必要, 您可以重新調整洗衣機背的進水管位置。方法是鬆開裝配臂, 轉動水管, 並再次擰緊裝配臂。

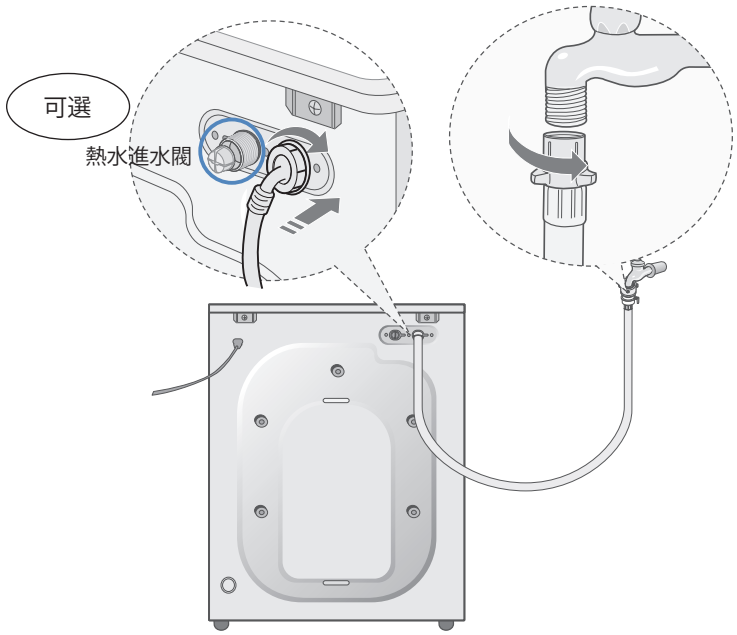

可選:

1. 將熱水進水管的紅色的 L 型裝配臂連接至機背上紅色的熱水進水口。然後用手擰緊。
2. 將熱水進水管的另一端連接至水槽的熱水水龍頭, 並用手擰緊。

連接進水管(可選)

1. 取下進水管的連接器。

2. 首先, 用十字起將連接器上的四個螺絲擰鬆。接著, 緊握連接器並將 (b) 部分沿圖中箭頭方向旋開 5mm 的間距。

3. 將連接器連接到水龍頭上並旋緊螺絲。然後, 將 (b) 部分沿圖中箭頭方向旋緊使 (a) 和 (b) 部分相連。



4. 將進水管接到連接器。往下拉進水管的 (c) 部分。在旋鬆 (c) 部分時, 隨著「嗒」聲響水管會自動接到連接器。



5. 將進水管的另一端連接到洗衣機後部的進水閥。沿順時針方向將水管旋到底。

完成連接後, 若水管漏水, 請重複上述步驟。請使用最常用的水龍頭供水。若水龍頭是正方形或太大, 請在將水龍頭插入連接器之前取出墊圈。

放置排水管

排水管末端的擺放位置有以下三種:

水槽邊緣之上

排水管放置的高度必須介於 60 至 90 cm 之間。欲令排水管保持合適的排水彎曲度, 請使用提供的水管塑膠定位器。使用吊鉤將定位器固定在牆壁上, 或用繩子將定位器繫在水龍頭上, 以免排水管移位。

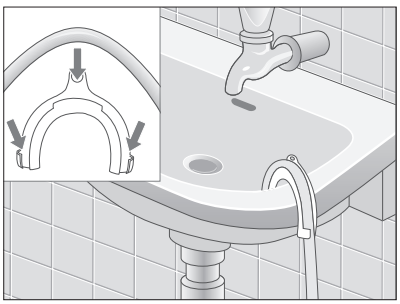

連接水槽排水道分支

將排水管末端連接在水槽排水管的分支上。如果排水管過長, 請不要將其強行塞入洗衣機中, 可能會產生異常噪音。

直接插入地漏

三星建議您使用機器配套的排水管, 直接將此水管插入地漏。

洗滌衣物

首次洗滌

首次洗衣之前, 必須在沒有衣物的情況下執行一次完整的洗滌過程。

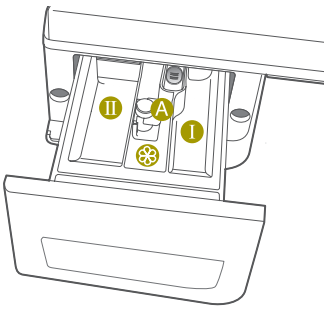

方法:

1. 按下⏻電源鍵。
2. 將少量洗劑倒入洗劑盒Ⅱ中的分隔盒內。
3. 給洗衣機供水。
4. 選擇清洗洗衣桶程序。
5. 按下啓動/暫停鍵。

- 這樣可以排出製造商在執行測試過程中殘留在洗衣機內的水。

洗滌劑盒Ⅰ: 用於預洗的洗滌劑。
洗滌劑盒Ⅱ: 用於主洗的洗滌劑、漂白劑等。
洗滌劑盒❀: 用於添加劑, 如衣物柔順劑等。

洗滌劑如何放入

1. 拉開洗滌劑盒。
2. 在洗滌劑盒Ⅱ中加入適量洗滌劑。
3. 如果您希望使用柔順劑, 請在洗滌劑盒❀中加入。

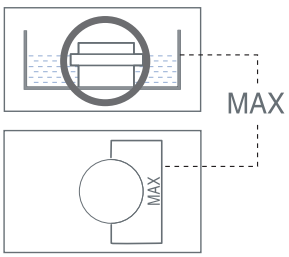

在倒入前, 必須用少量水稀釋濃縮或粘稠的織物柔順劑和調節劑, 避免因堵塞而不能加入, 柔順劑的使用不要過量, 應不超過插件Ⓐ"MAX"的基準下沿。

4. 如果您選擇了一個帶有預洗功能的洗滌程序, 請在洗滌劑盒Ⅰ中加入洗滌劑。

⚠ 警告 濃縮或濃稠的衣物柔順劑和軟化劑必須先用少量清水稀釋後才能倒入投放器內(以防流出受阻)。

控制面板概觀

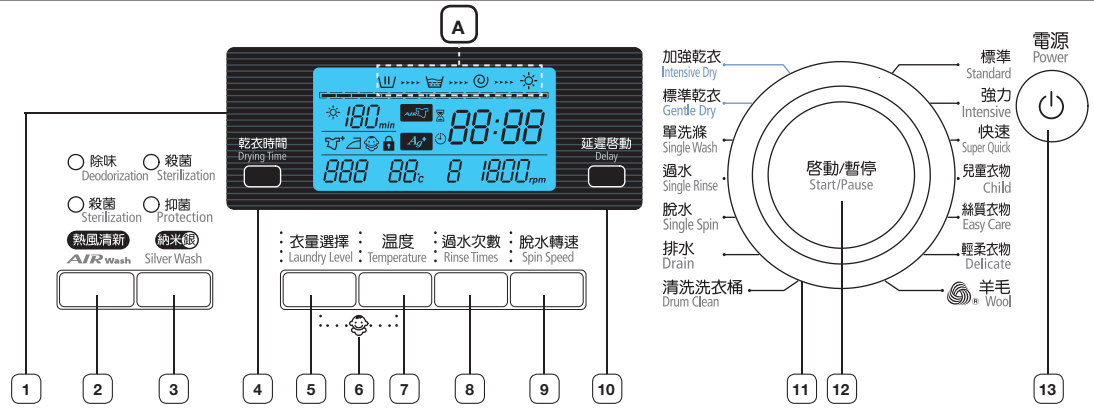

A部分的解釋為：(洗滌)- (漂洗)- (脫水)- (幹衣)

1 數碼圖解顯示	顯示剩餘洗衣時間、所有洗衣訊息及錯誤訊息。
2 熱風清新選擇鍵	重複按鍵可根據需要分別選擇除味和殺菌功能。 當您選擇了熱風清新功能後，將不可選擇其他洗滌程序。 **除味**：利用鼓入空氣形成強勁的高溫氣流，穿透衣物吸收和分解氣味粒子，最後凝結成水排出洗衣機外。 **殺菌**：利用高溫殺滅蟎蟲等有害微生物。
3 納米銀選擇鍵	會在洗衣和最後一次過水時注入銀納米活性水，施加殺菌和抑菌保護層。 （您可以選擇「**殺菌**」或「**抑菌**」或「**殺菌+抑菌**」。）
4 乾衣時間選擇鍵	重複按此按鈕可依次選擇各種可用的幹衣時間，幹衣時間最長為120分鐘。當您需要將濕衣服直接進行烘乾時，選擇幹衣時間時後會先自動進行脫水，再開始進行烘乾。（脫水時間大約15~17分鐘。）當您需要將衣物從洗滌到烘乾一次完成時，温度和脫水轉數則是默認值。 （120, 90, 60 和 30分鐘。）
5 衣量選擇鍵	您可以輸入衣物量並選擇相應洗滌時間。（根據衣物數量選擇 L1- L2 - L3）
6 童鎖選擇鍵	此按鈕用於防止兒童操作洗衣機。 **開/關** - 要開啓該程序：按啓動/暫停按鈕開啓洗衣機。 按住「**衣量選擇**」和「**温度**」按鈕 2-3 秒。只有在洗衣機開啓的情況下才能啓動。在洗衣過程中開啓「兒童安全鎖」功能之後，所有按鈕均無法使用，直至關閉該功能。「兒童安全鎖」燈光會亮起。要關閉該程序，請：再次按住「**衣量選擇**」和「**温度**」按鈕 2-3 秒，燈光即會熄滅且程序關閉。 若開機後，發現除電源鍵以外無法選擇其他按鍵，請先確認童鎖功能是否啓用。 當設置了童鎖功能後，僅有**電源鍵**可以工作。如關閉電源後重新開啓，童鎖功能自動取消；如電源線拔掉和重新插上時，童鎖功能仍保持原設置。
7 温度選擇鍵	重複按此按鈕可依次選擇各種可用的水溫選項。（冷水 (0℃)、30℃、40℃、60℃ 和 95℃）
8 過水次數選擇鍵	重複按此按鈕可依次選擇各種可用的過水次數。過水次數最多為五次。

洗滌衣物

9 脫水轉速選擇鍵	重複按此按鈕可依次選擇各種可用的脫水速度選項。 WD7752C8 | 0 ,400,800,1200 轉/分鐘 0：免脫水 指示燈不顯示時：免排水
10 延遲啓動選擇鍵	重複按此按鈕可依次選擇各種可用的延遲啓動選項（由 3 小時至 19 小時, 每次以一小時遞增）。 顯示的小時數為洗衣程序完成的時間。
11 Fuzzy 操控盤	轉動旋鈕從十四種可選程序中選擇一種洗滌程序。 標準 → 強力 → 快速 → 兒童衣物 → 絲質衣物 → 輕柔衣物 → 羊毛 → 清洗洗衣桶 → 排水 → 脫水 → 過水 → 單洗滌 → 標準幹衣 → 加強幹衣。
12 啓動/暫停鍵	按下此鍵可以啓動洗滌程序, 或暫停洗滌程序。
13 電源鍵	按此鍵可啓動/暫停洗衣機。 如果洗衣機接通電源後閒置10分鐘, 電源將自動關閉。

使用 FUZZY LOGIC 洗衣

這部全新的洗衣機採用 Samsung 的「Fuzzy Logic」自動操控系統, 令洗衣工作變得更輕鬆。選擇某一洗滌程序時, 洗衣機會自動設定合適的水溫、洗滌時間及洗滌速度。

欲使用 Fuzzy Logic 程序洗衣, 請:

1. 打開進水水龍頭。
2. 按下電源鍵啓動洗衣機。
3. 打開機門。
4. 將衣物一件一件鬆散地裝入洗衣桶內, 不要過量裝入。
5. 關上機門。
6. 在相應的洗滌劑盒中加入洗滌劑、柔順劑、預洗洗滌劑(若有需要)。
7. 轉動旋鈕選擇您所需的程序。共有14種程序可供選擇：標準 、強力 、快速 、兒童衣物 、絲質衣物 、輕柔衣物 、羊毛 、清洗洗衣桶 、排水 、脫水 、過水 、單洗滌 、標準幹衣 、加強幹衣。

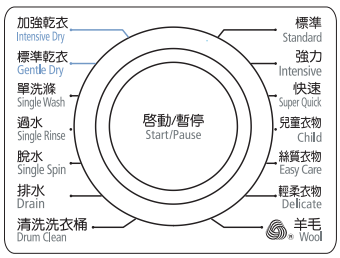

8. 此時, 按適當的選項按鈕即可控制洗滌溫度、過水時間、脫水速度及延遲時間。
9. 按 Fuzzy 操控面板上的啓動/暫停按鈕即可啓動洗滌過程。程序指示燈會亮起, 同時洗滌過程的剩餘時間會顯示於顯示屏上。

洗滌過程結束時:

程序結束時, 提示音響起, 同時LCD顯示幕上顯示程序運行結束提示"End", 電源將自動關閉。

1. 打開門。
2. 取出衣物。

洗滌衣物

手動洗衣

您可以不使用Fuzzy 操控盤而進行手動控制洗滌。

方法：

1. 打開進水水龍頭。
2. 按下⏻**電源鍵**啓動洗衣機。
3. 打開機門。
4. 將衣物一件一件鬆散地裝入洗衣桶內, 不要過量裝入。
5. 關上機門。
6. 在相應的洗滌劑盒中加入洗滌劑、柔順劑、預洗洗滌劑(若有需要)。
7. 轉動旋鈕選擇您所需的程序。
8. 按下**温度**鍵選擇適當的洗滌水溫：0℃(冷水), 30℃, 40℃, 60℃, 95℃。
9. 按下**過水次數**鍵選擇適當的過水次數。

   過水次數最多為5次。

   過水次數越多, 洗滌時間也會隨之相應延長。
10. 按下**脫水轉數**鍵選擇適當的脫水轉數(免排水, 免脫水, 400, 800, 1200轉)。

    0：免脫水, 指示燈不顯示時：免排水
11. 重複按此按鈕可依次選擇各種可用的延遲啓動選項（由 3 小時至 19 小時, 每次以一小時遞增）。

    （顯示的小時數為洗衣程序完成的時間。）
12. 按下**啓動/暫停**鍵, 開始運行洗滌程序。

使用延遲啓動

您可以從3到19小時之間以每小時的增量來選擇一個您需要洗滌程序完成的時間。

方法：

1. 依照衣物種類, 以手動或自動方式選擇一個洗滌程序。
2. 重複按鍵選擇一個**延遲啓動**的時間。

   當您選擇的洗滌程序所需時間大於3小時的時候, 則應該選擇大於3小時的延遲啓動時間。
3. 按下**啓動/暫停**鍵。延遲啓動功能指示燈會亮起, 時鐘開始倒數計時, 直至到達完成時間為止。如果您選擇了3小時的延遲啓動時間則表示經過3小時後洗滌程序將全部結束。
4. 若想取消此功能, 重複按延遲啓動鍵直至延遲啓動功能取消, 或直接按下**電源鍵**關閉電源即可。

熱風清新功能(除味/殺菌)

神奇的熱風清新功能, 不用水洗, 就可以輕鬆去除衣物上的多種異味, 還能起到殺菌作用。

使用熱風清新的實例:

1. 有黴味的西裝。
2. 發黴的羊毛大衣。

使用熱風清新的優勢:

1. 節省水、電、清潔劑和熨燙時間。
2. 有效的清洗那些不能常規洗滌的物品(枕頭、墊子、泰迪熊等)。

- 除菌效果達到99%。

熱風清新的使用方法:

1. 打開機門, 將衣物一件一件鬆散地放進洗衣機內, 關上機門。
2. 打開進水水龍頭, 按下電源鍵啓動洗衣機。
3. 按下熱風清新鍵選擇除味或殺菌功能。

- 當您選擇了熱風清新程序後, 將不能選擇其它洗滌程序。

4. 按下啓動/暫停鍵, 進行除味或殺菌。

- 洗衣桶轉動的每個迴圈, 都會有水不斷的進入和排出。

適合熱風清新的衣物:

- 羊毛大衣, 綿衣、鵝毛外套、毛線衫、被褥(不超過兩種)。

不適合除味的衣物:

- 皮革、貂皮、毛皮、天然絲織品、天鵝絨以及其它會被除味程序損壞的衣物。
- 佩戴飾品的衣物, 使用膠水的衣物、墊子、西服(膠水會在加熱後脫落)。
- 注意帶有鈕扣的衣物, 它們可能會因為加熱而被損壞。
- 對於那些堅硬的衣物, 可能會減小硬度並且產生變形。
- 非常髒的外衣如果沒有洗滌而使用該功能, 可能會變硬從而導致破損。

不適合殺菌的衣物:

- 堅硬的像木頭枕頭這樣的床上用品。
- 充滿穀物或者塑膠綿花的枕頭和床上用品。
- 電熱毯。
- 掉光毛並堆積了很多灰塵的羊毛衣物。

您不能使用熱風清新功能來洗滌那些充滿泡沫和海綿的被褥等。
泡沫或者海綿可能會起火災, 從而導致產品的損壞和您的生命安全。

洗滌衣物

納米銀功能(殺菌/抑菌)

選擇此功能後, 可以電離出納米銀在水中, 破壞細菌發育, 使其無法實現分裂、繁殖, 最終達到殺菌抑菌的目的。

如果每週使用1次納米銀功能, 那麼可以連續使用10年左右。如果每週使用納米銀功能次數較多, 用戶應及時通知廠家專門維修人員進行更換納米銀發生器。

方法:

1. 打開進水水龍頭, 按下⏻(**電源鍵**) 啓動洗衣機。
2. 打開機門, 將衣物一件一件鬆散地放進洗衣機內, 關上門。
3. 在相應的洗滌盒中加入洗滌劑和柔順劑。
4. 旋轉旋鈕選擇您所需的洗滌程序。

- 標準、強力、超快、兒童衣物、絲質衣物 、輕柔衣物、清洗洗衣桶程序都可以選擇該功能。

5. 按下**納米銀**功能鍵, 選擇**殺菌**或者**抑菌**功能。

- 當您選擇了**單洗滌**, 納米銀功能鍵只能選"**殺菌**"。
- 當您選擇了**過水次數**, 納米銀功能鍵只能選"**抑菌**"。

6. 選擇您需要的洗滌衣量和洗滌溫度、過水次數以及脫水轉速。
7. 按下**啓動/暫停**鍵開始洗滌程序。

加強幹衣程序/標準幹衣程序

當您有衣物需要烘乾時可選擇加強幹衣或標準幹衣程序, 您可以如下操作:

1. 按下**電源鍵**⏻啓動洗衣機。
2. 打開機門, 放入需要烘乾的衣物後請關上機門。
3. 旋轉旋鈕選擇**加強幹衣**或**標準幹衣**程序。

- **加強幹衣**程序自動選擇烘乾時間為120分鐘。您也可重複按"烘乾時間"按鈕選擇適當的烘乾時間, 依次可選擇為120, 90, 60和30分鐘。
- **標準幹衣**程序自動選擇烘乾時間為60分鐘。您也可重複按"烘乾時間"按鈕選擇適當的烘乾時間, 依次可選擇為60和30分鐘。

4. 按下**啓動/暫停**鍵, 啓動程序。

- 如果衣物含水過多, 洗衣機將自動脫水後運行幹衣程序。

洗滌至幹衣模式

當您需要將衣物從洗滌到幹衣一次完成時, 您可以如下操作。

1. 打開進水水龍頭, 按下**電源鍵**⏻啓動洗衣機。
2. 打開機門, 將要洗滌的衣物一件一件鬆散地放入洗衣機內關上門。
3. 根據洗滌物量, 放入適量的洗滌劑、柔順劑和預洗洗滌劑(若有需要)。
4. 旋轉旋鈕選擇您需要的洗滌程序。

不可以選擇幹衣的程序是**輕柔洗**、**羊毛洗**、**單排水**以及**桶清潔**。

5. 按下幹衣時間按鈕。

- 您可以重複選擇該按鈕選擇適當的**幹衣時間**。該幹衣時間為120, 90, 60和30分鐘。
- 脫水轉速默認為最高轉速。
- 根據需要您可以選擇**延遲啓動**功能。

6. 按下**啓動/暫停**鍵, 開始運行洗滌程序至幹衣功能。

當您同時選擇了洗滌程序和幹衣功能時, 為了使您的衣物能夠達到更好的幹衣效果, 衣物在進入幹衣功能前, 最後一次脫水將增加五分鐘時間。

烘乾時注意事項及參考

1. 當您同時選擇了洗滌程序和幹衣功能模式時, 為了使您的衣物能夠達到更好的烘乾效果, 衣物在進入幹衣功能前, 最後一次脫水將增加5分鐘時間。
2. 為了防止過多的衣物在一起烘乾而引起褶皺, 請設定短時間烘乾, 如果乾燥不足時可再次增加烘乾。
3. 洗滌桶內如果有水, 選擇烘乾功能時會先自動進行脫水後再開始進行烘乾。此時的脫水速度自動選擇為最高脫水轉速。
4. 幹衣時必須將水龍頭打開, 否則不能進行烘乾。
5. 根據衣物類型的不同來選擇幹衣功能, 否則可能引起衣物的收縮、變形或褪色。
6. 帶有汽油、煤油、酒精或溶劑類的衣物不能洗滌或脫水, 更不能進行烘乾, 可能有引起火災及爆炸的危險。

幹衣功能將結束時, 可能因桶內溫度過高而需要進行冷卻, 此時顯示幕將持續顯示"COOL", 最長約10分鐘, 衣物冷卻後顯示幕顯示"END", 程序結束。

洗衣常識及竅門

將衣物分類:按以下特徵將衣物分類:

- **衣物保養標籤的符號種類**:將衣物分成棉質、混合纖維、合成纖維、絲質、羊毛及人造絲。
- **顏色**: 將白色與其他顏色的衣物分開。新的顏色衣物需單獨洗滌。
- **尺寸**: 將不同尺寸的衣物一起洗滌可增強清洗效果。
- **耐磨程度**:將輕柔衣物分開洗滌, 使用「輕柔衣物」程序洗滌純羊毛、窗簾布及絲質衣物。查看洗滌衣物上的標籤或參閱附錄說明上的衣物保養表。

掏空口袋: 硬幣、大頭針等物品會損壞麻質衣物、洗衣槽及水箱。

繫緊扣件: 拉合拉鏈、扣緊鈕扣或勾扣, 並將鬆脫的帶子繫好。

預洗棉質衣物:本新款洗衣機配合新型洗劑可達到最理想的洗滌效果, 為您節省能源、時間、用水及洗劑。但是, 對於較髒的棉質衣物, 使用蛋白質配方洗劑進行預洗效果更佳。

計算洗衣量:切勿將過量衣物放進洗衣機內洗滌, 否則可能會影響洗衣效果。可以參考下表, 計算不同種類衣物的洗衣容量。

程序	洗滌容量(公斤)
	WD7752C8
標準	7.5
快速	3.0
輕柔衣物	2.5
羊毛	2.0

洗劑提示:您應根據衣料(棉質、合成纖維、輕柔衣物、羊毛)、顏色、水溫和骯髒程度選用適當的洗劑。

切記使用專為自動洗衣機配製的「低泡」洗劑。

請參照洗劑製造商建議的衣物重量、骯髒程度及所在地區的水質硬度。若不清楚水質硬度情況, 請向有關供水機構查詢。

請將洗劑及添加劑置於安全、乾爽且孩童無法觸及的地方。

洗衣機的保養

緊急排水

1. 拔下洗衣機電源插頭。
2. 用硬幣或鑰匙打開底部擋板。

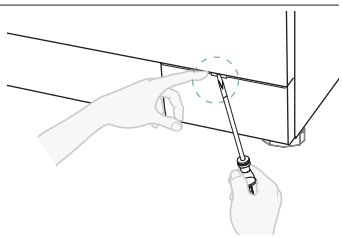

3. 向左旋轉並緩緩拉出緊急排水軟管約15釐米。
4. 打開白色塞子將殘留水排入容器內。
5. 蓋上塞子後將排水軟管推回原位。
6. 重新裝上底部擋板。

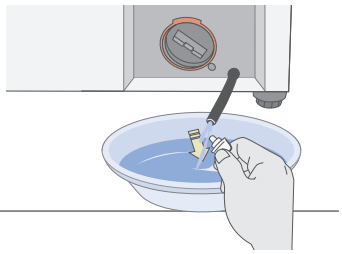

處理已凍結的洗衣機

如果溫度低於攝氏零度, 您的洗衣機被凍住, 您可以:

1. 拔下洗衣機電源插頭。
2. 用溫水浸泡後的毛巾包裹水龍頭, 再用溫水沖淋以使進水管解凍。
3. 卸下進水管, 將其放入溫水浸泡。
4. 在洗衣桶內倒入溫水, 並讓其置留10分鐘。
5. 重新將進水管連接到水龍頭上, 檢查進水和排水是否正常。

清潔外殼

1. 用柔軟布料和不含磨蝕成分的家用清潔劑擦拭洗衣機外殼, 包括控制面板。
2. 用柔軟布料擦乾外殼。
3. 切勿用水沖洗外殼, 以免造成洗衣機部件的損壞。

清洗洗滌劑盒及凹進處

1. 按洗劑盒內的釋放桿, 拉出盒子。
2. 拆除分隔盒 ❀的蓋子。
3. 以清水沖洗各部分。
4. 用舊牙刷清洗盒內的凹進處。
5. 重新插入蓋子 (穩定推入到位) , 並重新將液體洗劑隔板放入盒內。
6. 將洗劑盒推回原位。
7. 在沒有衣物的情況下, 進行一次過水程序。

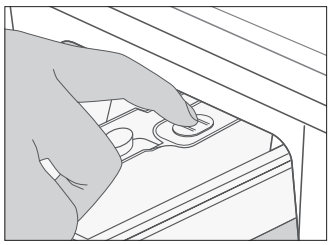
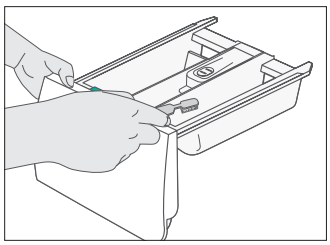
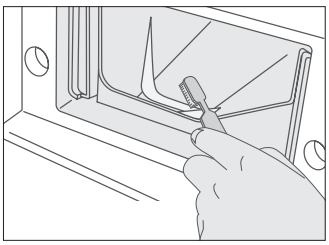

清洗碎屑過濾網

每年您應該至少清洗殘渣篩檢程序5-6次, 或者在顯示屏出現以下錯誤訊息時清洗:

1. 用一字起將洗衣機的底部擋板打開。
2. 向左旋轉並緩緩拉出緊急排水軟管約15釐米, 打開白色塞子將殘留水排入容器內。
3. 擰開並取出過濾網蓋。

4. 清除過濾網上的所有污垢或其他雜物。確保過濾網背後的排水泵推進器未阻塞。重新裝上過濾網蓋。
5. 裝上底部擋板。

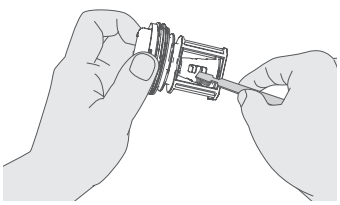

洗衣機的保養

清洗進水管過濾網

每年應該至少清洗進水閥過濾器一次, 或者在顯示屏出現以下錯誤訊息時清洗:

方法:

1. 關閉洗衣機的水源。
2. 擰開洗衣機背面的水管。
3. 用鉗子由水管末端輕輕拉出過濾網, 以清水沖洗乾淨, 並徹底洗淨螺紋接駁器內外。
4. 將過濾網推回原位。
5. 重新連接進水管。
6. 打開水龍頭, 確保水管連接處無漏水現象。。

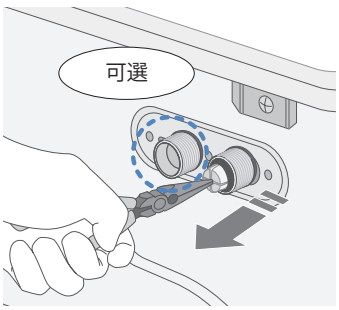

故障排除

常見問題和解決方法

常見問題	解決方法
洗衣機無法啓動	• 確保機門關緊。 • 確保接通洗衣機電源。 • 確保水龍頭已打開。 • 確保啓動/暫停按鈕已按下。
不進水或供水不足	• 確保水龍頭已打開。 • 確保進水管沒有凍結。 • 確保進水管沒有彎摺。 • 確保進水管過濾網未阻塞。
洗衣程序完成後, 洗劑仍留在洗劑盒內	• 確保洗衣機在充足水壓下操作。 • 將洗劑放入洗劑盒深處(而不是靠近外緣)。
洗衣機震動或噪音過大	• 確保洗衣機放於平坦地面。若地面不平, 調整洗衣機腳座以取得平衡。 • 確保運輸螺釘已拆除。 • 確保洗衣機沒有觸及任何其他物件。 • 確保洗衣機內的衣物擺放均勻。
洗衣機無法排水和/或脫水	• 確保排水管沒有被壓著或彎摺。 • 確保進水管過濾網未阻塞。
無法打開機門	• 斷開電源插頭與電源的連接。 • 取下洗衣機的進水管。 • 用硬幣打開底部擋板, 找到橙色的塑膠拉環並向前拉打開機門。 • 檢查是否設置了童鎖功能。 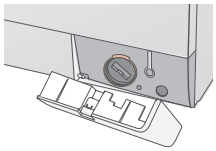

瞭解錯誤訊息

錯誤代碼	解決方法
dE2	• 關上機門。
4E	• 檢查進水龍頭是否打開。 • 檢查水壓。
5E	• 清洗碎屑過濾網。 • 確保排水管安裝正確。
UE	• 機內衣物擺放不均勻, 鬆開纏結衣物。 若只洗滌一件衣物, 例如浴袍或牛仔褲, 最後脫水效果可能不理想, 顯示視窗會出現「UE」錯誤訊息。
LE	• 檢查排水管末端是否太低。(檢查排水管托架是否損壞) • 檢查排水管末端是否浸泡在水裡。

聯絡售後服務供應商之前:

1. 嘗試解決問題(請參閱本頁之「疑難排解」)。
2. 重新啓動程序, 觀察是否再次出現同樣問題。
3. 若問題仍未解決, 請致電售後服務供應商並說明故障情況。

程序表

程序表

(● 可隨意選擇， √ 必須選擇)

程序	最大洗衣量(公斤)	洗滌劑和柔軟劑		最高溫度℃	最高脫水轉速(轉/分鐘)	延遲啓動	銀離子	烘幹
	WD7752C8	洗滌劑	柔軟劑		WD7752C8			
標準	7.5	√	●	95	1200	●	√	●
快速	3.0	√	●	30	1200	●	√	●
兒童衣物	7.5	√	●	95	1200	●	√	●
輕柔衣物	2.5	√	●	30	800	●	√	–
羊毛	2.0	√	●	40	800	●	–	–
清洗洗衣桶	–	√	–	60	1200	●	√	–

程序	洗滌類型
標準	一般或輕微弄髒的棉織品、亞麻床單、亞麻桌布、內衣、毛巾、襯衫等。
快速	輕微弄髒的棉織品或亞麻女衫、襯衫、花色亞麻織物、牛仔褲等。
兒童衣物	一般或輕微弄髒的兒童棉織物、床上用品、桌布、內衣、毛巾、襯衫等。
輕柔衣物	輕柔的窗簾布、服裝、裙子、襯衫和上裝。
羊毛	僅限帶有純羊毛標誌的可機洗羊毛織物。
清洗洗衣桶	使用此功能保持洗滌內桶的乾淨和衛生。

1. 程序時間資料按照 Standard IEC 456 所列之條件進行測量。

2. 具體的使用量可能因不同的水壓、水溫、洗衣量及衣物種類而與以上圖表所列之數值有所差異。

(● 可隨意選擇， √ 必須選擇)

程序	最大洗衣量(公斤)	洗滌劑和柔軟劑		最高溫度℃	最高脫水轉速(轉/分鐘)	延遲啓動	銀離子	烘幹
	WD7752C8	洗滌劑	柔軟劑		WD7752C8			
強力	7.5	√	●	95	1200	●	●	●
單洗滌	2.5	√	–	40	1200	●	●	●
過水	–	–	●	–	1200	●	●	●
脫水	–	–	–	–	1200	●	–	●

程序	洗滌類型
強力	可以強力解除污漬的程序。中度或嚴重弄髒的棉織物, 亞麻床單和桌布、內衣、毛巾、牛仔褲、工作服等。
單洗滌	僅洗滌但不過水和脫水。
過水	將衣物過水和脫水但不洗滌。
脫水	僅脫水。

附錄

衣物保養符號說明

	耐磨質料		最高熨衣溫度為 100°C
	輕柔質料		不能熨衣
	可於 95°C 水溫下洗滌之衣物		可使用任何溶劑乾洗
	可於 60°C 水溫下洗滌之衣物		僅可使用高氯化物、打火機油、純酒精或 R113 乾洗
	可於 40°C 水溫下洗滌之衣物		僅可使用飛機燃料、純酒精或 R113 乾洗
	可於 30°C 水溫下洗滌之衣物		不能乾洗
	可手洗之衣物		攤平晾乾
	僅可乾洗		可掛起晾乾
	可於氯漂		以衣架晾乾
	不可漂白		可使用乾衣機, 一般熱度
	最高熨衣溫度為 200°C		可使用乾衣機, 低熱
	最高熨衣溫度為 150°C		不能使用乾衣機

用電警告

為避免火災、觸電及其他損害, 請謹記以下安全守則:

- 僅可使用本產品說明標籤上指明之電源種類操作洗衣機。若您不清楚家中的電源種類, 請向電器經銷商或當地的電力公司諮詢。
- 僅可使用接地或極化電源插座。這種插頭只能以一種方式插進電源插座。若不能將插頭完全插進插座, 請將插頭倒轉再插。若依然不能插入, 請聯絡電氣技師更換插座。
- 保護電源線。電源線應妥當安置, 以免被踩踏或被附近物件擠壓, 特別留意插頭、插座及機身接駁點上的電線。
- 切勿讓插座或拖板負荷過重, 否則, 可能引起火災或觸電。

環保資訊

- 本產品使用循環再造物料製造。若要棄置本產品, 請遵守當地的廢物處理規則。棄置前請切斷電源線, 以免本產品連接電源, 拆除機門, 以免小動物或孩童困於機內。
- 遵照洗劑製造商的用量指引, 切勿過量使用洗劑。
- 若非必要, 不要在洗衣過程進行前使用除污產品或漂白劑。
- 用盡洗衣容量(確切數量視所用程序而定), 以節省水電。

產品執行標準

本產品符合歐洲安全標準、EC directive 93/68 及 EN Standard 60335。

技術參數

類型		前置式滾桶洗衣機	
外型尺寸		WD7752C8	
		寬598X厚634X高840 （毫米）	
水壓		50kp~800kp	
用水量		90升	
產品重量	淨重	80 kg	
洗滌和烘乾容量	型號	WD7752C8	
	洗滌	7.5 kg	
	烘乾	3.5 kg	
消耗功率	型號	WD7752C8	
	洗滌	230 V	150 W
	洗滌和加熱	220 V	2000 W
		240 V	2400 W
	烘乾	220 V	2000 W
		240 V	2400 W
	排水泵	34 W	
最高脫水轉速	型號	WD7752C8	
	轉/分鐘	1200	
洗滌噪音	聲壓級（A計權）	41dB	
	聲功率級（A計權）	53dB	
脫水噪音	聲壓級（A計權）	50dB	
	聲功率級（A計權）	62dB	

SAMSUNG

有疑問或意見？

國家	致電	或造訪我們的線上服務, 網址:
Hong Kong	3698-4698	www.samsung.com/hk

編號：DC68-02413K_HKTC